BMT202 MESLEKI YABANCI DIL 2 6.HAFTA

GAMA MESLEK YÜKSEKOKULU ÖĞR.GÖR.MEHMET DURSUN

1. Speed Display :
This display shows the speed values during programming. It also indicates accelerating
condition, braking condition, power failure condition, open lid condition and the condition that
occurs when Start is pressed while the lid is open by the expressions Acc, br, E oFF, oPEn, cLoSE

Lid, respectively. The error codes that occur in case of any failure condition are also shown on
this display.
2. Time Display :
This display shows the time during programming and the run.

3. Lid Key and Led:
This key opens the lid if the led is on. It is active before starting the centrifugation and at the
end of the centrifugation when the audible alarm sounds.
4. Set Key:

This key is used to set the speed and time during programming and to check the RCF value
during the operation.
5. Pulse Key:
The motor increases to the maximum value and continues to spin on that speed as long as this
key is pressed.

6. Value Increasing Key :
This key is used to increase the parameter values during programming.
7. Start Key and Led:
This key starts the centrifugation operation and the led turns on.
7. Start Key and Led:

The led turns off if the program is stopped manually or the lid is opened at the end of the
program.
O. Walter Danna altern Karr
8. Value Decreasing Key :
This key is used to decrease the parameter values during programming.
0. Stop kovi:
9. Stop key :

This key is used to stop the operation manually.	

Kaynakça:

N200 BENCH - TOP CENTRIFUGE - USER'S MANUAL

User Manual.

www.nuve.com.tr/manuals